

LMS Quick Installation Guide

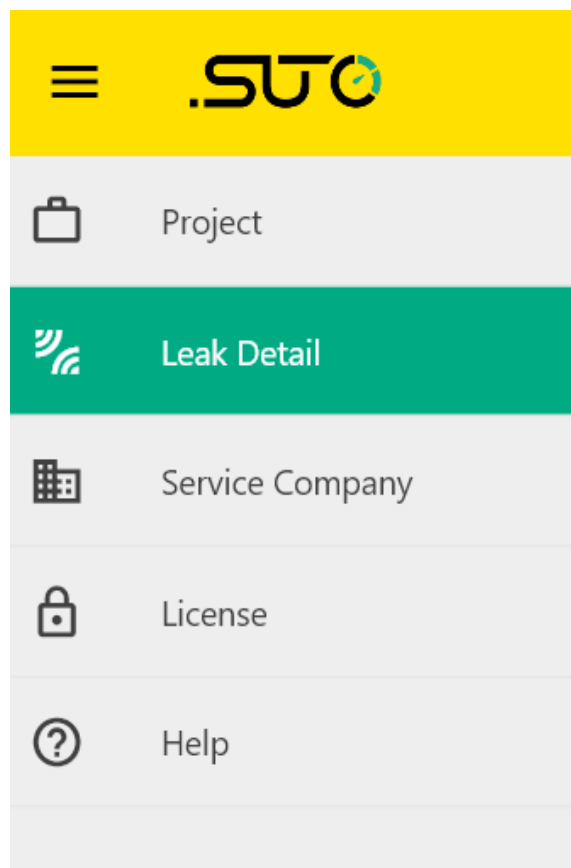


Table of contents

1 Registered trademarks.....3
2 Overview.....4
3 Install LMS.....5
4 Run LMS manually.....11

Revision: 2024-1



Last modifications: June, 2024

1 Registered trademarks

Trademark	Trademark owner
SUTO®	SUTO ITEC

2 Overview

The LMS (Leak Management Software) is used to manage the leak information imported from the S531/S532 detector. It is a lightweight, GUI-based software running on the Windows platform.

Note: The LMS can only run on Windows 10 or Windows 11 system.


The LMS is free to use for 30 days. After that you have to purchase a license if you want to use it.

This quick start guideline helps you get start with the LMS, including detailed illustrations from installation and startup of the LMS.


3 Install LMS

Follow the steps below to install the LMS.


1. Download the LMS software from the SUTO website: www.suto-itec.com to your PC.
2. Double click the **LMSInstaller.exe** file on your PC, as shown below.

Name	Date modified	Type	Size
 LMSInstaller	2021/12/9 11:44	Application	19,643 KB


3. Your computer may pop up the message as shown below. if so click **More info**. If not, please skip to step 4 directly.

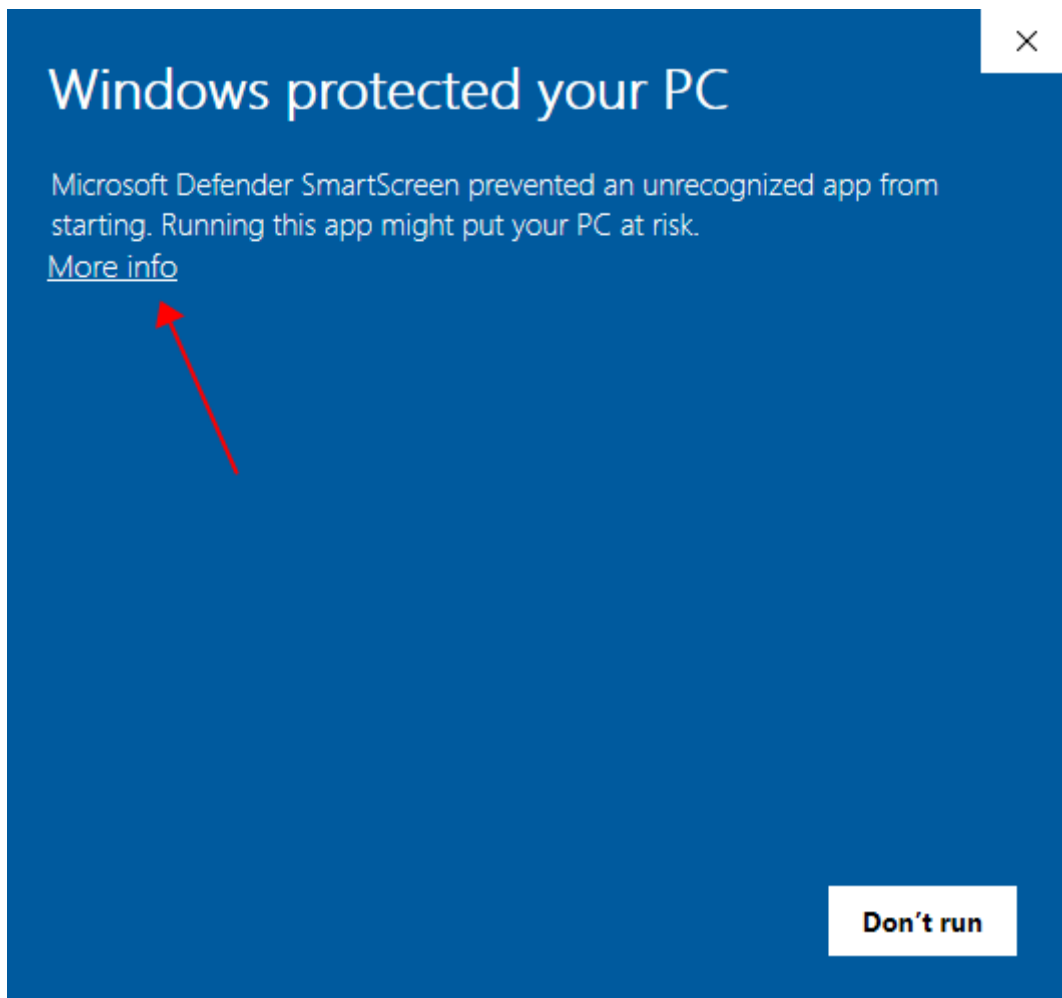


4. Click **Run anyway**.

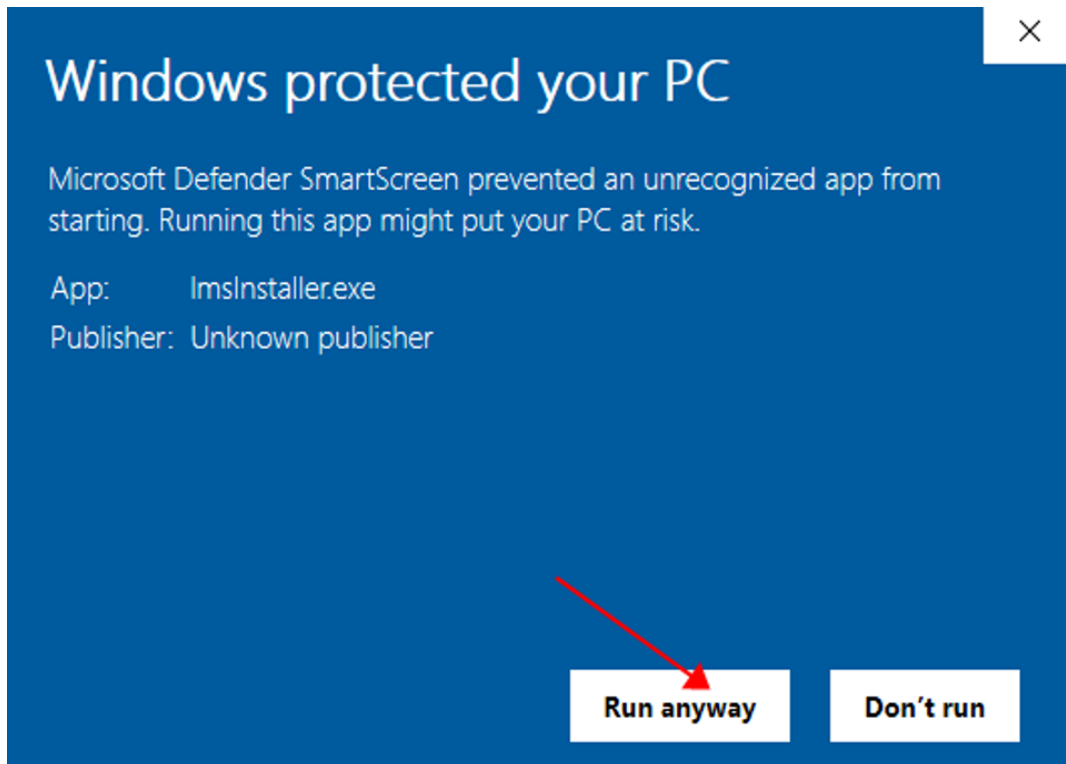


5. Click **Yes** for the pop up warning.

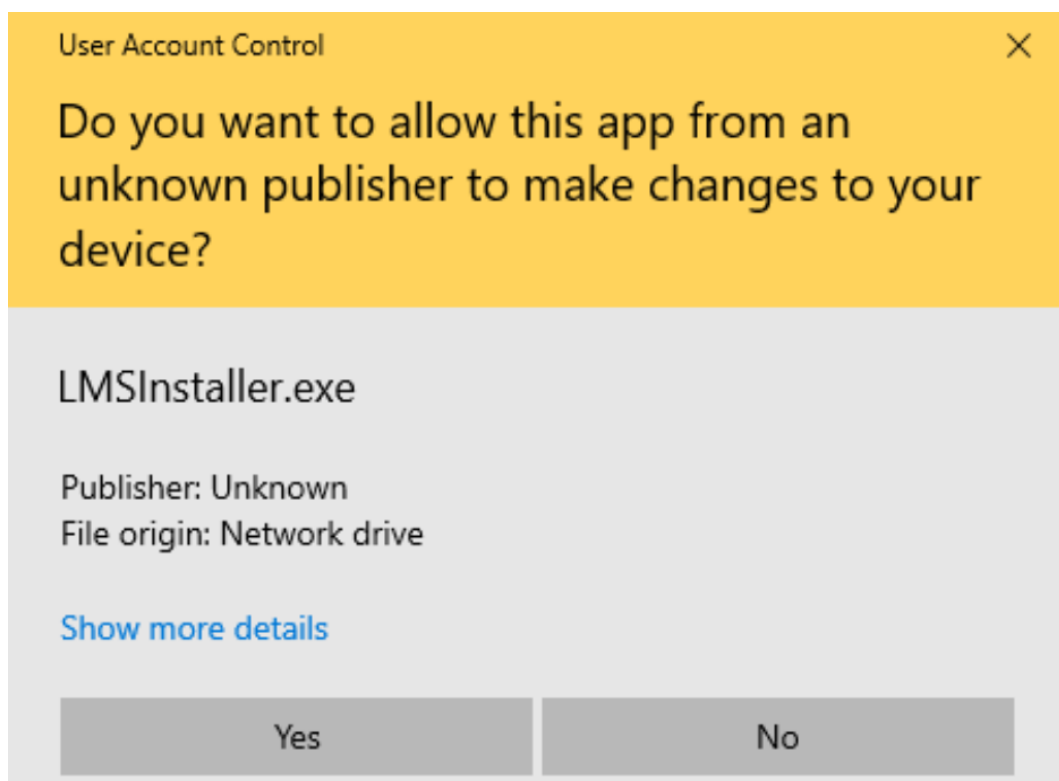


6. Select the installation path, by default it is displayed as below. Click **Next** to navigate to next step.

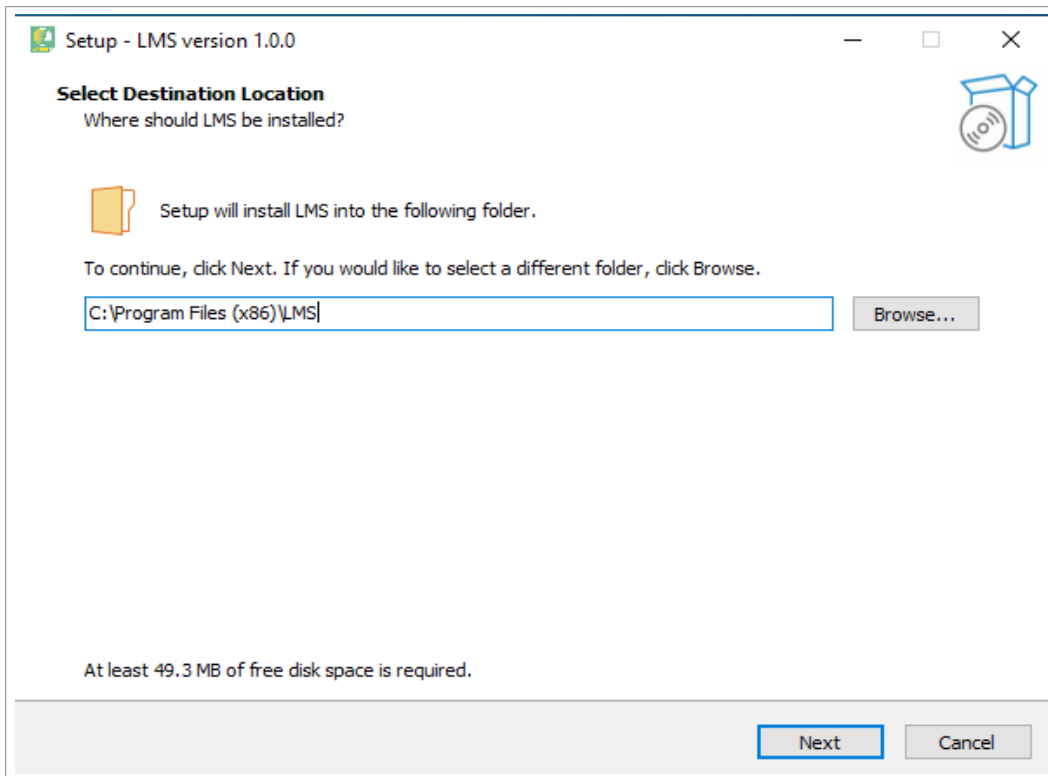



7. Click **Next**.

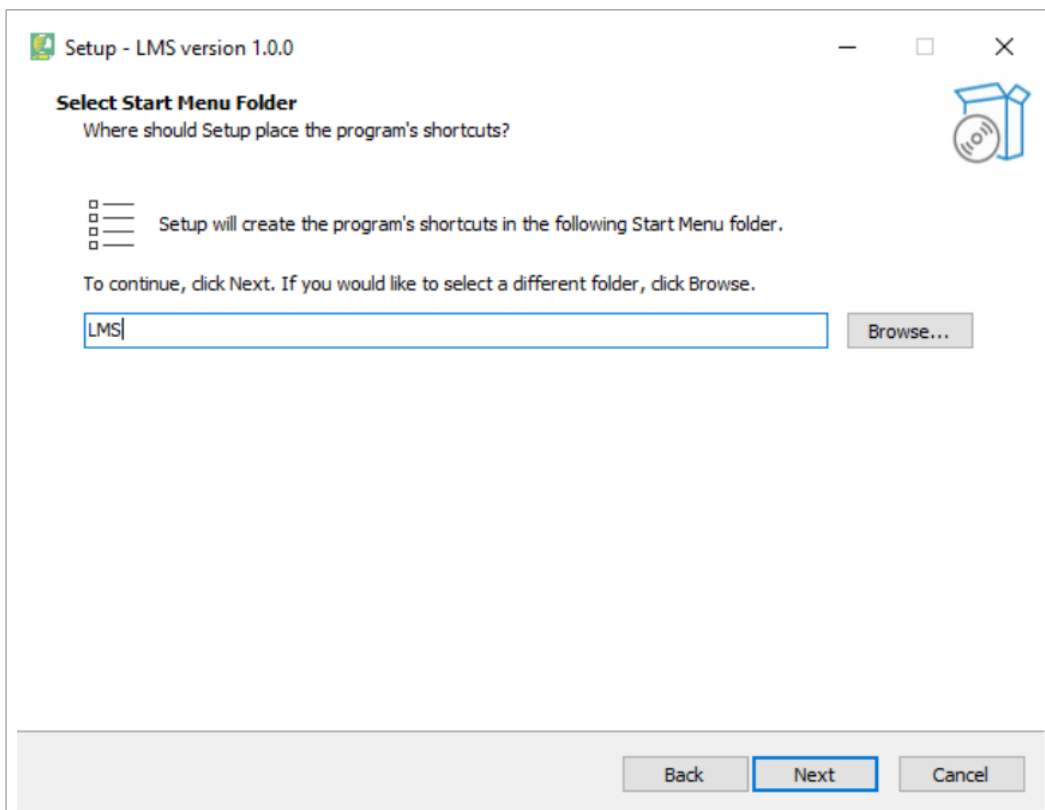

8. Tick the check box as below indicating to create a shortcut in your desktop. Click **Next**.

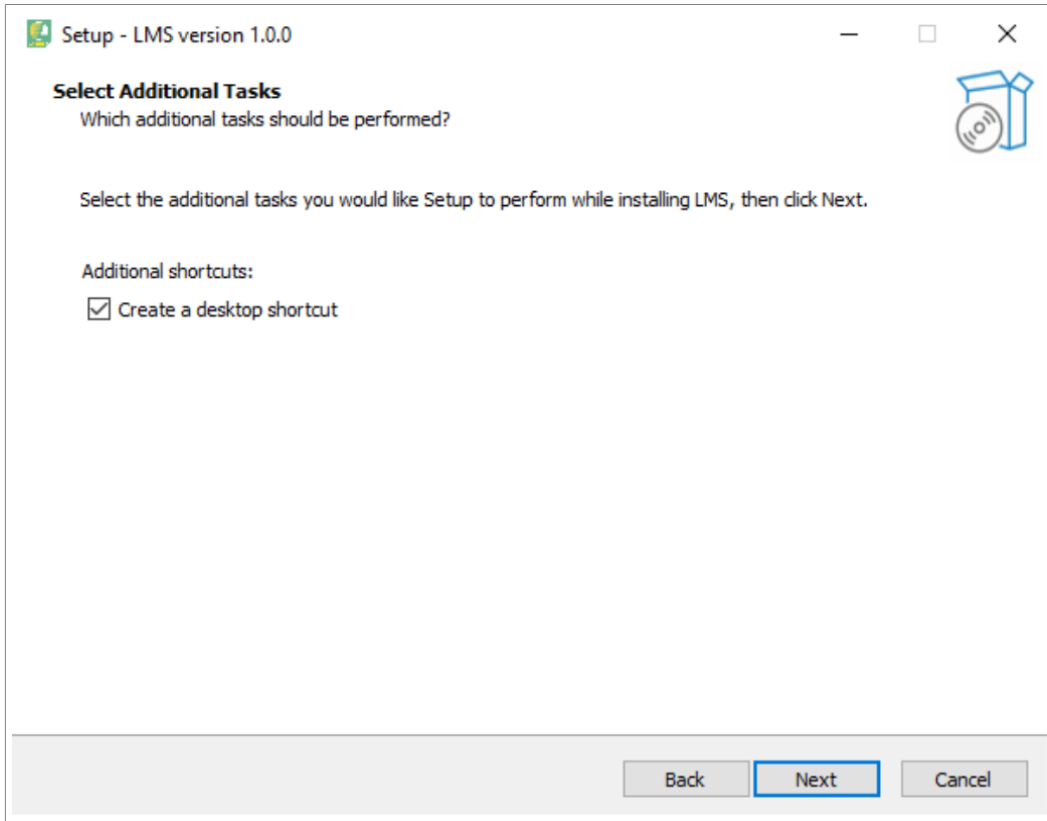


9. Click **Install** to start the installation.

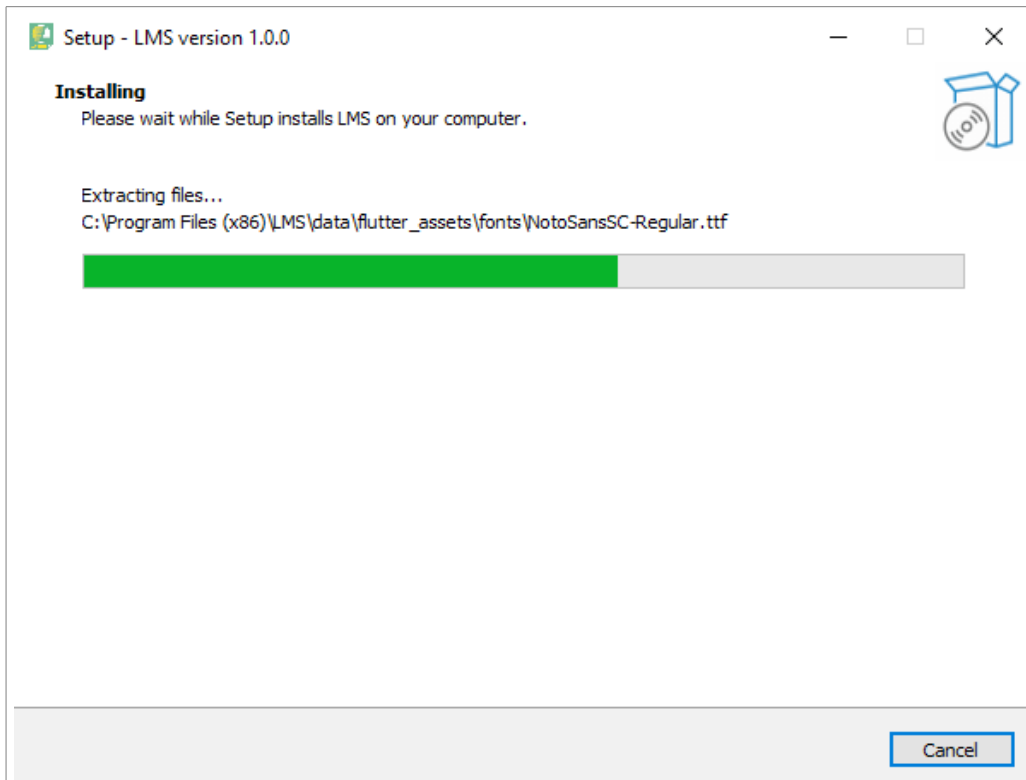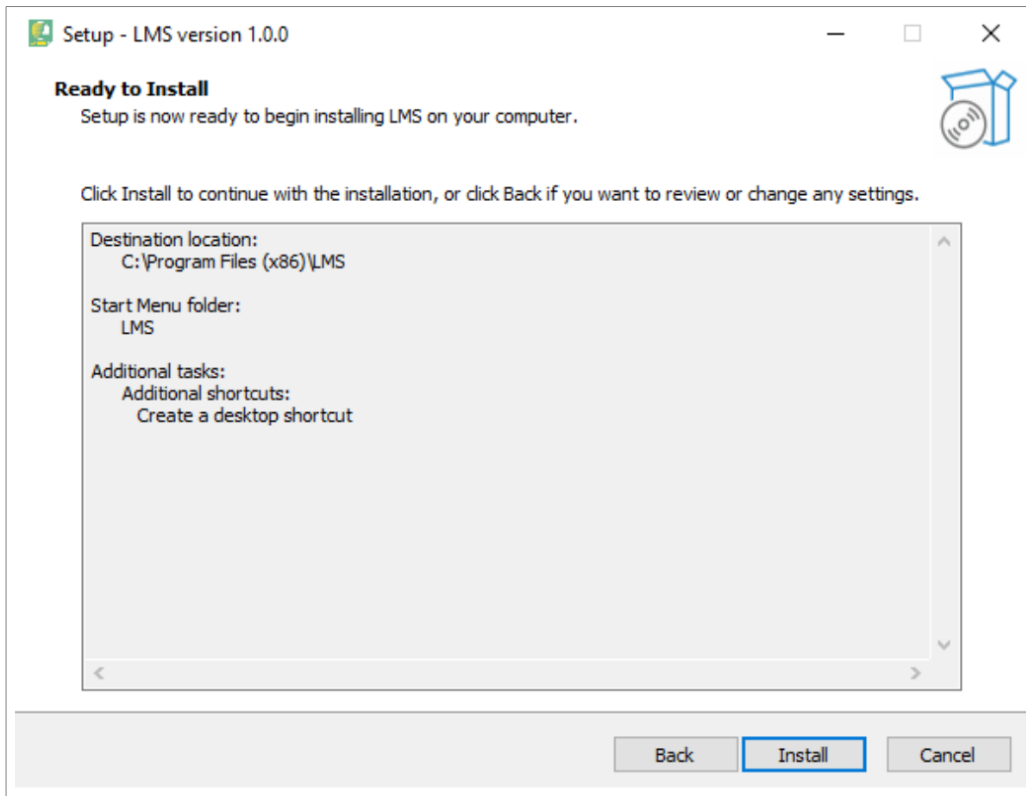

9. It takes seconds to complete the installation. Click **Finish** when it is complete.

The LMS will run automatically if the check box of **Launch LMS** is checked.

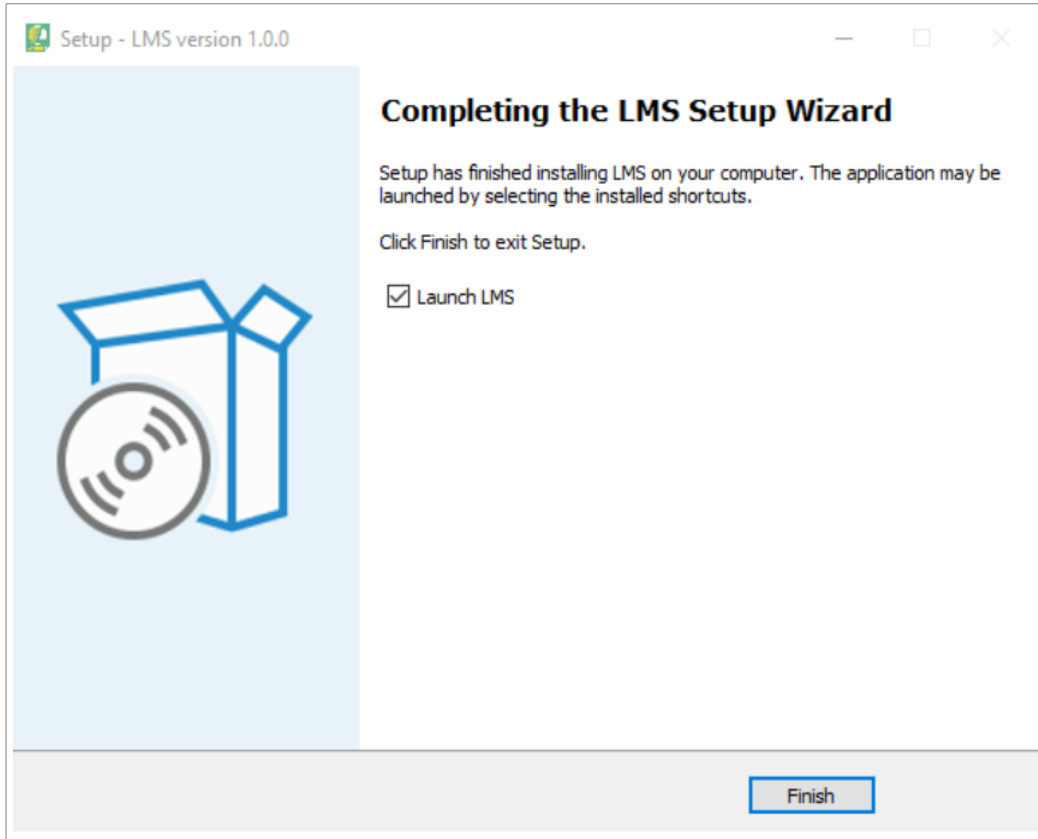

4 Run LMS Manually

Double click the LMS shortcut icon in your desktop to run LMS.



5 Use the LMS

Scan the QR code below to obtain the LMS instruction manual to learn how to use the LMS.



SUTO iTEC GmbH

Grißheimer Weg 21
D-79423 Heitersheim
Germany

Tel: +49 (0) 7634 50488 00

Fax: +49 (0) 7634 50488 19

Email: sales@suto-itec.com

Website: <http://www.suto-itec.com>

All rights reserved ©

SUTO iTEC (ASIA) Co., Ltd.

Room 10, 6/F, Block B, Cambridge Plaza
188 San Wan Road, Sheung Shui, N.T.
Hong Kong

Tel: +852 2328 9782

Fax: +852 2671 3863

Email: sales@suto-itec.asia

Website: <http://www.suto-itec.com>

Modifications and errors reserved

LMS_QG_en_V2024-1
